


ASSEMBLY INSTRUCTIONS FOR ADJUSTABLE TABLE LEG

HEIGHT ADJUSTMENT:

1. LOCATE THE 5/16" X 3/4" HEX HEAD BOLT IN BAG.
2. SLIDE INNER LEG ASSEMBLY IN OR OUT TO DESIRED HEIGHT. ALIGN NEAREST HOLES AND SECURELY TIGHTEN BOLT USING 1/2" BOX WRENCH. DO NOT OVER TIGHTEN.
3. REPEAT FOR EACH LEG. INSURE ALL LEGS ARE ADJUSTED TO THE SAME HEIGHT.

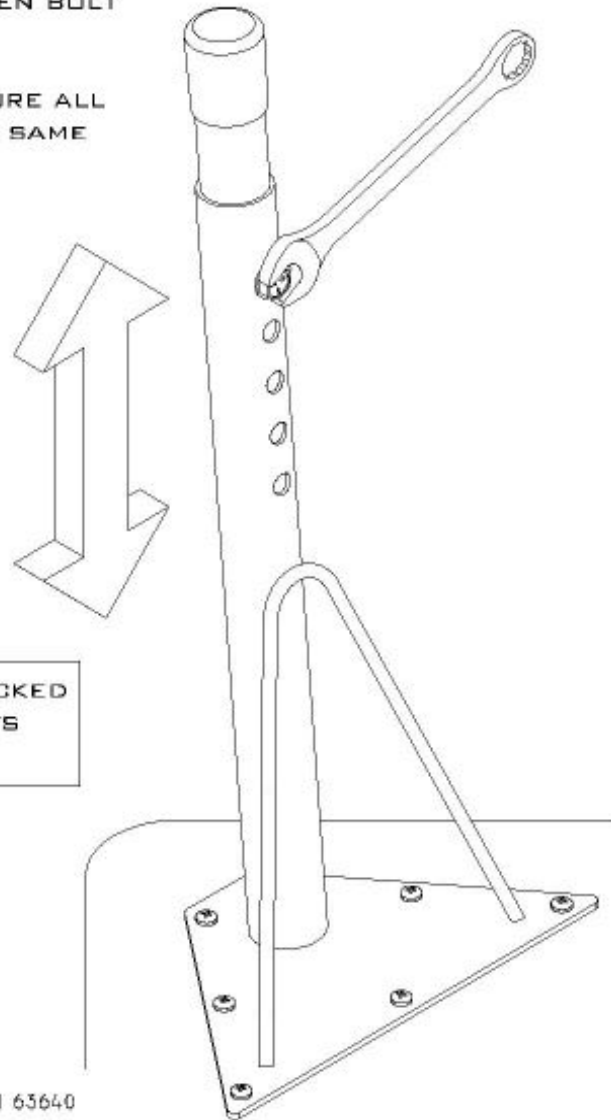

NOTE: TABLE SHOULD BE CHECKED PERIODICALLY TO INSURE BOLTS ARE SECURELY FASTENED.

benee's


1602 AIRPARK DRIVE - FARMINGTON, MISSOURI 63640
PHONE: 1-800-854-1411 / FAX: (573) 756-2384

ASSEMBLY INSTRUCTIONS FOR TABLE TOP MOUNTING

TOOLS REQUIRED:


- 1 - PHILLIPS SCREW DRIVER
- 1 - 1/2" BOX WRENCH

PARTS REQUIRED:

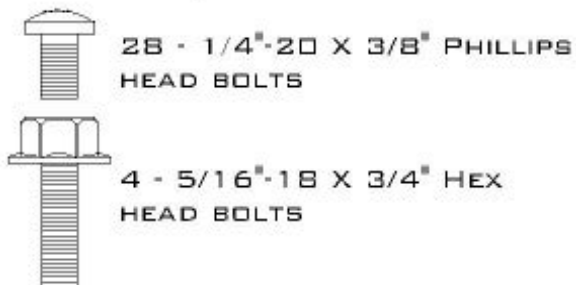

ATTACHMENT OF LEG ASSEMBLY TO TABLE TOP:

1. PLACE TABLE TOP UPSIDE DOWN ON WORK SURFACE. INSURE CLEAN AREA TO AVOID SCRATCHING OR DAMAGING TOP.
2. PLACE LEG OVER PRE-INSTALLED INSERTS ON THE UNDERSIDE OF THE TABLE TOP.
3. ALIGN HOLES IN LEG PLATE WITH INSERTS IN TABLE TOP AND HAND TIGHTEN 7 PHILLIPS HEAD 1/4"-20 X 3/8" BOLTS IN EACH HOLE.
4. USING PHILLIPS HEAD SCREW DRIVER, TIGHTEN EACH BOLT SECURELY. DO NOT OVER TIGHTEN.
5. REPEAT FOR EACH LEG REQUIRED FOR TABLE ASSEMBLY.

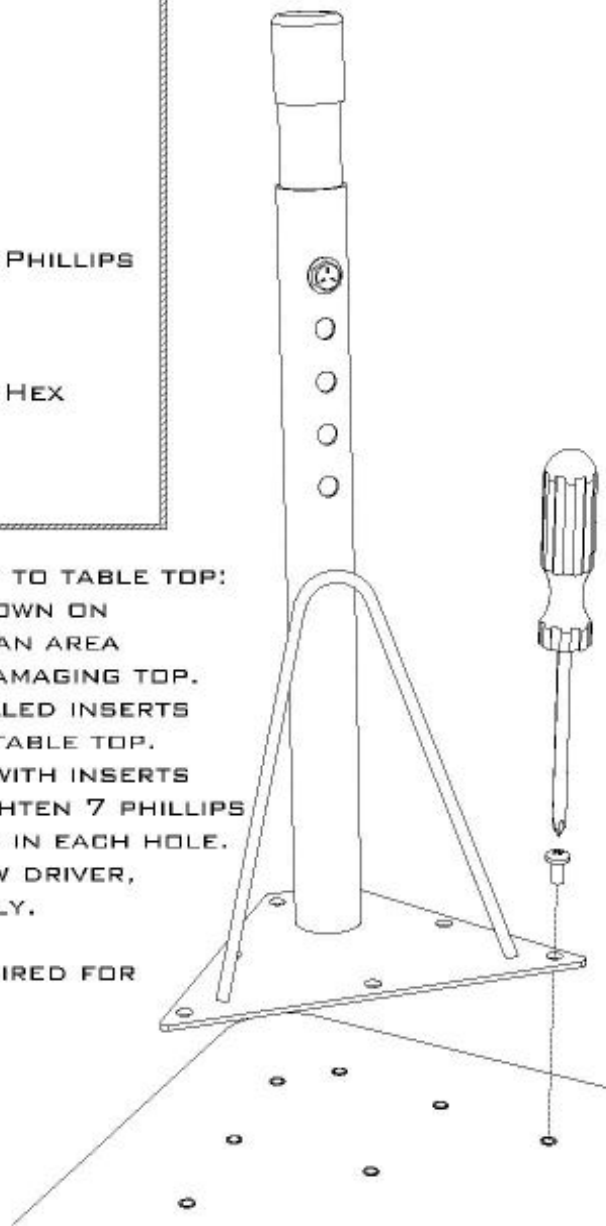

benee's

1602 AIRPARK DRIVE - FARMINGTON, MISSOURI 63640
PHONE: 1-800-854-1411 / FAX: (573) 756-2384